

What is a diode?

General description of diodes and our diode products

Contents

Contents	2
1. Description	3
2. Diodes	3
2.1. What is a Diode?	3
2.2. Diode Applications	4
2.3. Diode Structure	4
2.4. Why Does the Current Flow in One Direction?	6
2.5. Electrical Characteristics	7
2.5.1. Static Characteristics	7
2.5.2. Switching Characteristic	8
3. Types of Diodes	10
3.1. General-purpose Rectifier Diodes	10
3.2. Fast Recovery Diodes	10
3.3. High Voltage Rectifier Diodes	12
3.4. Snubber Diodes	12
3.5. Alternator Diodes	12
3.6. TVS Diodes	13
3.7. Schottky Diode	14
4. Diode Ratings and Characteristics	16
4.1. Absolute Maximum Ratings	16
4.2. Electrical Characteristics	17
4.3. Mechanical Characteristics	17
Important Notes	18

1. Description

This document provides a general description of diodes and our diode products. For more information on our diode products, please refer to the links below.

- **Diodes**
<https://www.semicon.sanken-ele.co.jp/ctrl/en/product/category/Diode/>
- **Selection Guides**
<https://www.semicon.sanken-ele.co.jp/common/pdf/selectionguide/sge0006.pdf>

2. Diodes

2.1. What is a Diode?

A diode is a semiconductor device, allowing the flow of current in one direction. If you compare the electric current to the flow of water, the diode is the image of a “valve”.

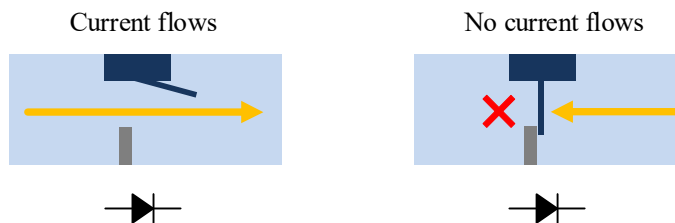


Figure 2-1. Image of Diode

Figure 2-2 shows an example of an actual diode. The diode is marked on the cathode side. See Section 2.3 for cathode.

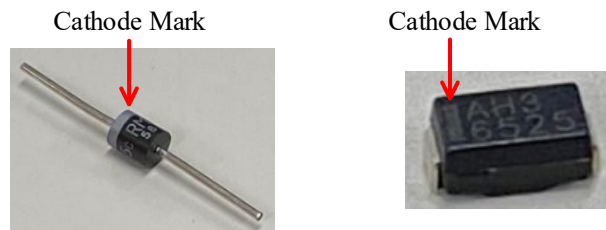


Figure 2-2. Example of Diode

2.2. Diode Applications

- **Rectification**

Diodes allow the current to pass in one direction only. This is called rectification. Figure 2-3 shows a full-wave rectifier circuit that uses the diode rectification. Full-wave rectifier circuits are often used in power supply circuits, and are combined with capacitors to convert alternating current to direct current.

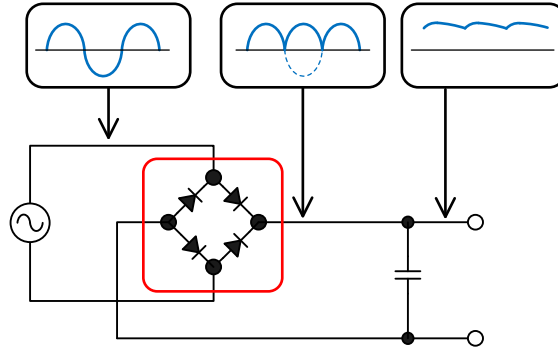


Figure 2-3. Full-wave Rectifier Circuit

- **Reverse direction current prevention**

Diodes protect circuits and circuit components by preventing current from flowing in the reverse direction.

- **Overvoltage protection**

Diodes protect circuits and circuit components from overvoltage.

2.3. Diode Structure

Diode junction structures are classified into PN junctions and Schottky junctions.

- **PN junctions**

Semiconductors whose charge carriers are holes are called p-type semiconductors. Semiconductors whose charge carriers are electrons are called n-type semiconductors. A structure in which a p-type semiconductor and an n-type semiconductor are joined is called a PN junction. Recombining (carriers disappearing when electrons fill holes) occurs at the junction, creating a region no charge carriers are present. This is called the depletion layer.

The terminal on the p-type semiconductor side is called anode, and the terminal on the n-type semiconductor side is called cathode.

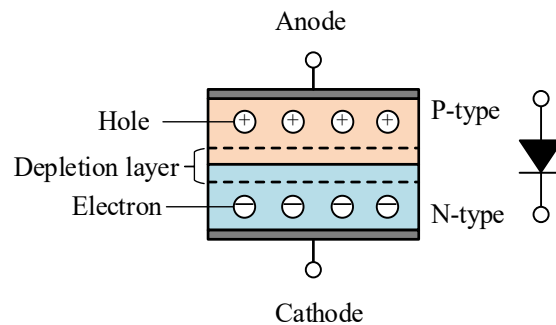


Figure 2-4. PN Junction

The N-layer of an actual diode consists of an N+ layer and an N- layer. The breakdown voltage of the diode is determined by the thickness of the N- layer and the carrier concentration. The thicker the N- layer and the lower the carrier concentration, the higher the breakdown voltage. However, there is a trade-off relationship between breakdown voltage and resistance, thus, increasing the breakdown voltage also increases the resistance.

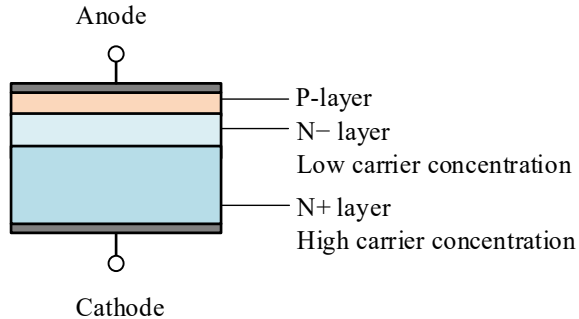


Figure 2-5. PN Junction (P-layer/ N-layer)

• **Schottky junction**

A structure in which metal and a semiconductor (generally an N-type semiconductor) are joined is called Schottky junction. A Schottky barrier is created at the junction. The terminal on the metal side is called the anode, and the terminal on the N-type semiconductor side is called the cathode. Since P-type semiconductors are not used, holes are not used as carriers.

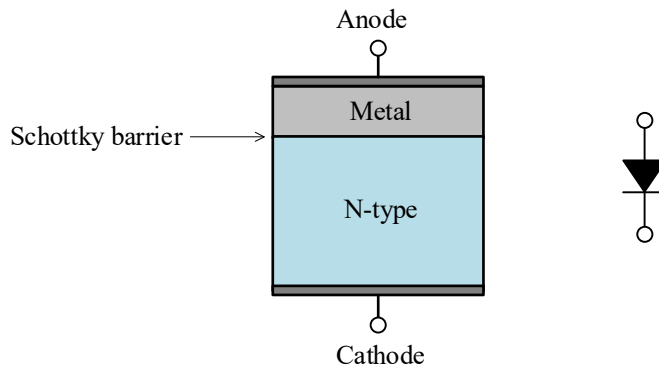


Figure 2-6. Schottky Junction

A diode allows the current to flow when a voltage is applied in the forward direction (positive voltage to the anode and negative voltage to the cathode). Even if voltage is applied in the reverse direction, no current flows.

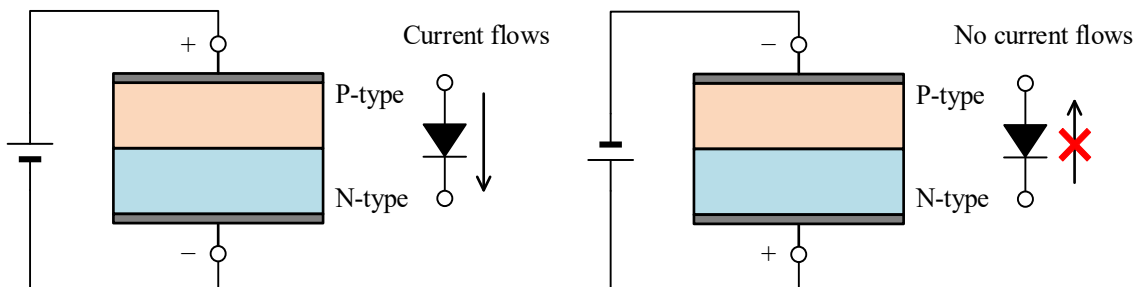


Figure 2-7. Direction to Apply Voltage

2.4. Why Does the Current Flow in One Direction?

The current flow is described using a PN junction diode as an example.

	<p>No voltage applied Holes and electrons are in equilibrium.</p>
	<p>Voltage applied in the forward direction When a voltage is applied in the forward direction, the depletion layer narrows, and holes and electrons repeatedly recombine. Holes and electrons continue to move in the direction of the arrow (i.e., the current flows.)</p>
	<p>Voltage applied in the reverse direction When a voltage is applied in the reverse direction, the depletion layer expands, and holes and electrons do not move (i.e., no current flows.)</p>

2.5. Electrical Characteristics

This section describes the electrical characteristics of diodes.

2.5.1. Static Characteristics

Figure 2-8 shows the static characteristic of diodes.

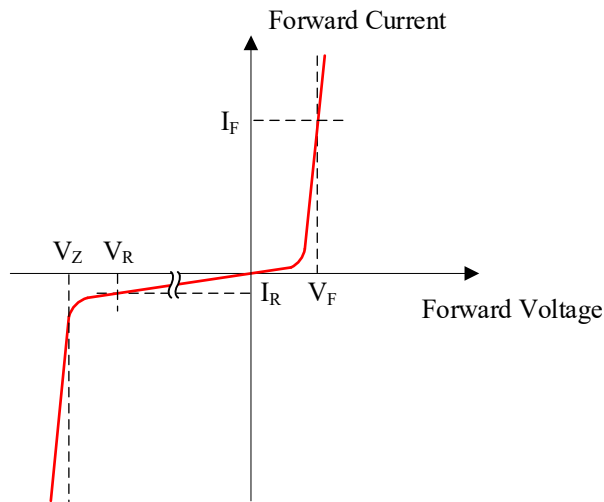


Figure 2-8. Static Characteristics of Diodes

- Forward voltage drop, V_F , forward current, I_F**
 The current that flows when a voltage is applied in the forward direction is called the forward current, I_F . The voltage when I_F flows is called the forward voltage drop, V_F .
 When comparing the $I_F - V_F$ characteristics of diodes, the lower the V_F required to flow the same amount of I_F , the lower the power loss and the better the characteristics.
 V_F has a negative temperature characteristic and thus the higher the temperature, the lower the V_F .
- Reverse voltage, V_R , reverse leakage current, I_R**
 The current that flows when a voltage is applied in the reverse direction is called the reverse leakage current, I_R . The voltage when I_R flows is called the reverse voltage, V_R .
 When a voltage is applied in the reverse direction, a slight leakage current, I_R , flows. A diode with a smaller I_R has less power dissipation and can prevent thermal runaway.
 I_R has positive temperature characteristics, and thus the higher the temperature, the higher the I_R .
- Breakdown Voltage, V_Z**
 When the reverse voltage, V_R , is increased, the reverse leakage current, I_R , increases sharply at a certain voltage. This voltage is called the breakdown voltage, V_Z . The breakdown voltage is also called the Zener voltage.

2.5.2. Switching Characteristic

As shown in Figure 2-9, the recovery current flows when the reverse voltage is applied from the state where the forward voltage is applied by turning the switch. The time from when the recovery current flows until the recovery current decreases is called the Reverse Recovery Time, t_{rr} . The larger the forward current, I_F , the longer the t_{rr} . Since the recovery current causes noise and power loss, the shorter the t_{rr} , the better the characteristics.

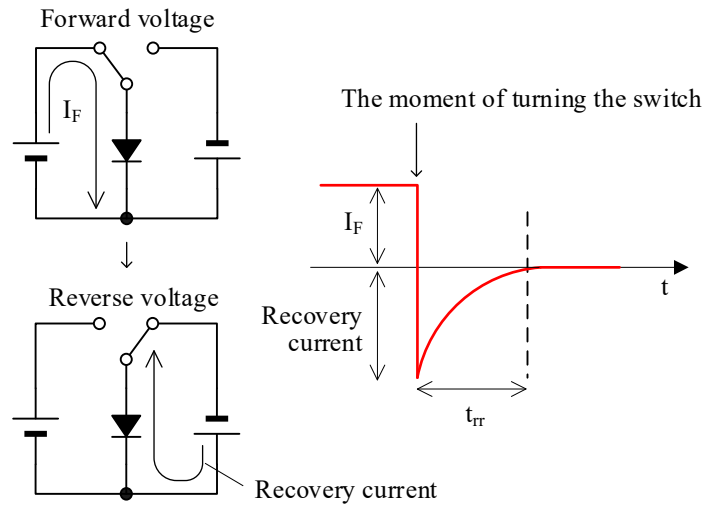


Figure 2-9. Reverse Recovery Time, t_{rr}

The following describes the reason why the recovery current flows when a voltage changes from the forward voltage to the reverse voltage.

	<p>A: When no voltage applied Holes and electrons are in equilibrium.</p>
	<p>B: When forward voltage applied Electrons move to P-type semiconductors and holes move to N-type semiconductors (i.e., I_F is flowing).</p>
	<p>C: The moment when the reverse voltage is applied At the moment the switch is turned, a reverse voltage is applied to the diode, and the directions of movement of electrons and holes are reversed. The current that flows at this time is the recovery current.</p>
	<p>D: When reverse voltage applied After a moment, the depletion layer expands and holes and electrons do not move. The time from C to D is t_{rr}.</p>

3. Types of Diodes

Table 3-1 shows the types of our diodes. This section describes the applications and features of each type of diode.

Table 3-1. Types of Diodes

Junction Type	Diode Type	Product List
PN Junctions	General-purpose Rectifier Diodes	URL
	Fast Recovery Diodes	URL
	High Voltage Rectifier Diodes	URL
	Snubber Diodes	URL
	TVS Diodes	URL
	Alternator Diodes	URL
Schottky Junctions	Schottky Diode	URL

3.1. General-purpose Rectifier Diodes

General-purpose rectifier diodes are used for commercial power supply rectification (50 Hz / 60 Hz) and reverse connection protection circuits. These diodes have high breakdown characteristics.

3.2. Fast Recovery Diodes

Fast Recovery Diode (FRD) is used for rectification of high frequency (tens to hundreds of kHz) such as switching power supplies. Compared to general-purpose rectifier diodes, the reverse recovery time, t_{rr} , is shorter. While t_{rr} of a general-purpose rectifier diode is several μ s to several tens of μ s, t_{rr} of FRD is several tens to several hundreds of ns.

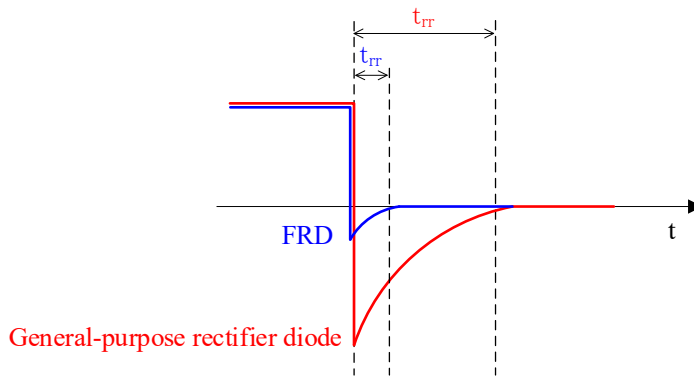


Figure 3-1. Comparison of Reverse Recovery Time, t_{rr}

The reverse recovery time, t_{rr} , of FRD is short because holes are captured by carrier traps near the junction. As shown in Figure 3-2, when holes that have penetrated to the N-layer move to the P-layer, the carrier traps in the N-layer capture the holes and quickly eliminate the holes to shorten t_{rr} .

However, there is a trade-off relationship between t_{rr} and forward voltage drop, V_F , and thus, providing a carrier trap structure to shorten t_{rr} increases V_F . Conversely, lowering the V_F increases t_{rr} .

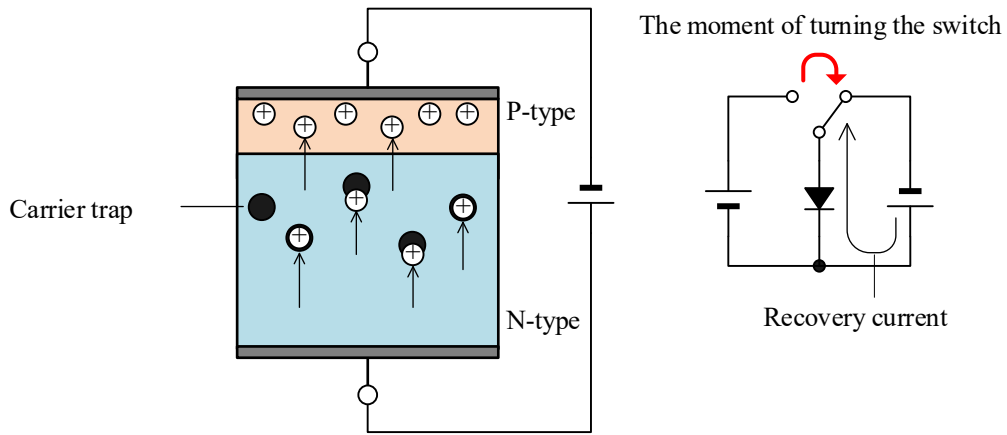


Figure 3-2. Carrier Trap

Since the FRD recovery current causes power loss, the peak value of the recovery current should be small. When the recovery current recovers abruptly, a ringing occurs, resulting in noise, therefore, the FRD with a smaller recovery current and a softer recovery has better characteristics (see Figure 3-3).

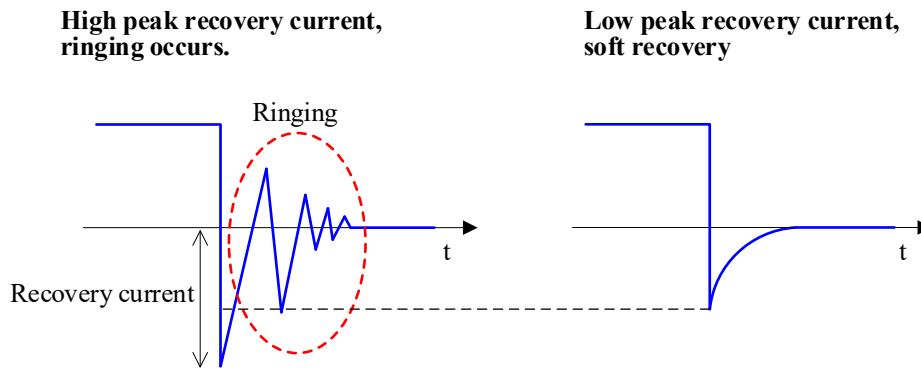


Figure 3-3. FRD Reverse Recovery Time, t_{rr}

3.3. High Voltage Rectifier Diodes

High-voltage rectifier diodes for consumer use are used in microwave oven inverter circuits and high-voltage circuits. Automotive high voltage rectifier diodes are used for ignition coils of fuel injection systems.

3.4. Snubber Diodes

Snubber diodes are auxiliary switch diodes especially designed for snubber circuits, which are used in the primary-side of flyback switching power supplies. They reduce the ringing voltage generated at power MOSFET turn-off, contributing to improvement of the efficiency of switching power supplies and noise reduction.

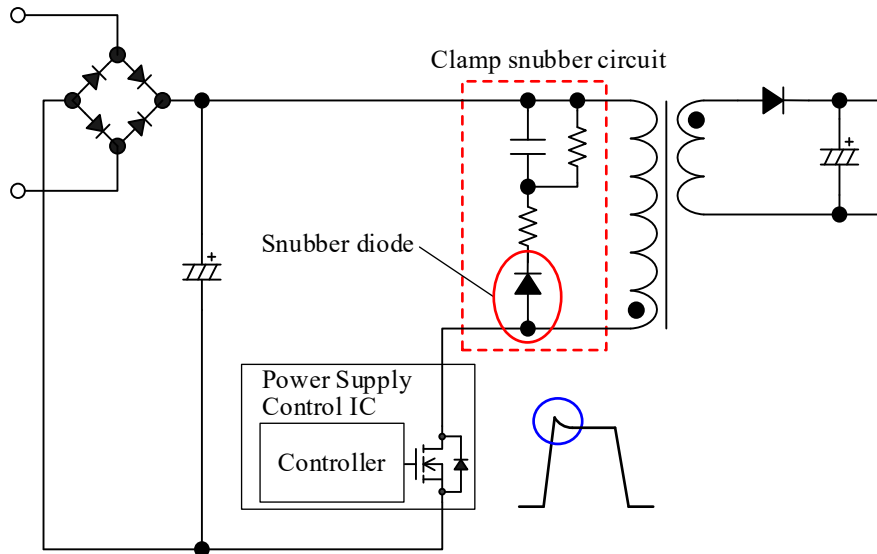


Figure 3-4. Clamp Snubber Circuit

3.5. Alternator Diodes

Alternator diodes can withstand the harsh environments of the automotive engine room. They are available in surface mount and pressfit type packages.

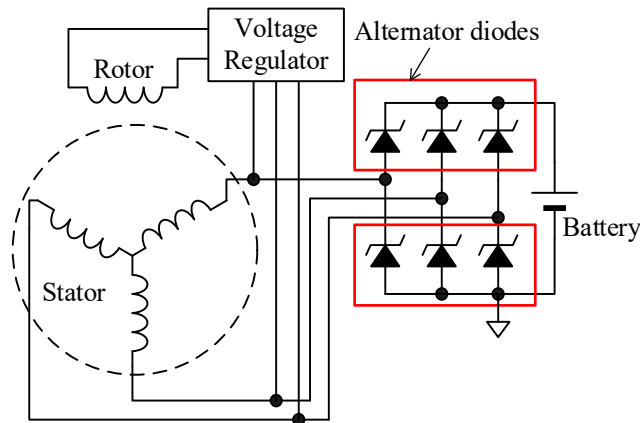


Figure 3-5. Alternator

3.6. TVS Diodes

Transient Voltage Suppressor (TVS) diodes are used to protect circuits and devices from overcurrent, overvoltage, and surges. The reverse voltage of the TVS diodes during breakdown is almost constant regardless of the current flowing (see Figure 3-6). TVS diodes use the reverse characteristic to protect circuits and devices.

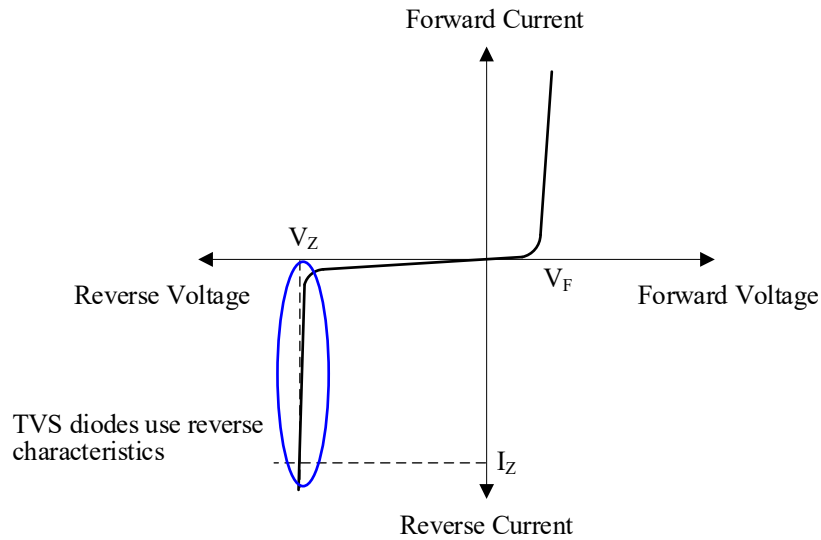


Figure 3-6. Diode Static Characteristics

3.7. Schottky Diode

Schottky diodes use the barriers created by Schottky junctions. Compared to PN junction diodes, Schottky diodes have a lower forward voltage drop, V_F , and a shorter reverse recovery time, t_{rr} , making them suitable for high-speed switching. t_{rr} has no temperature dependence and thus t_{rr} is the same at all temperatures.

However, compared to PN junction diodes, Schottky diodes have a larger reverse leakage current, I_R , and higher power loss ($I_R \times V_R$). The higher the temperature, the higher the power loss. Hence, it is required to design the heat dissipation so that thermal runaway does not occur.

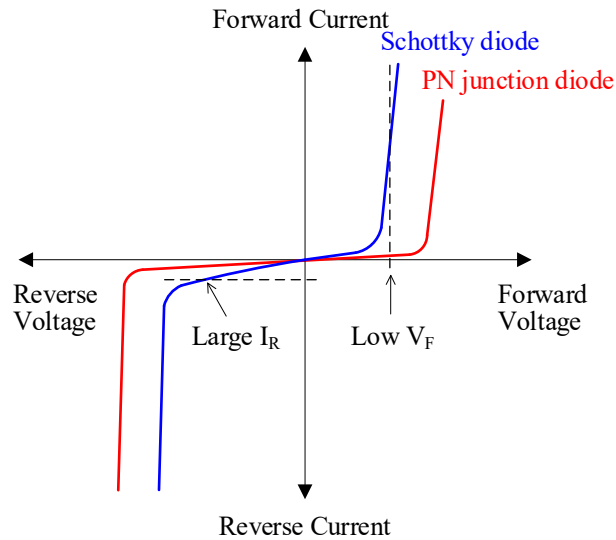


Figure 3-7. Static Characteristics Comparison

The breakdown voltage of Schottky diodes is lower than that of PN junction diodes, and it is difficult to achieve high breakdown voltage (generally up to 150 V). As shown in Figure 3-8, the breakdown voltage is increased by thickening the N-layer and lowering the carrier concentration. However, the loss increases because the resistance increases and V_F also increases and thus the performance is out of the practical use range. We are developing a high breakdown voltage and practical SiC Schottky diode using next generation power semiconductor SiC.

Next generation power semiconductors: <https://www.semicon.sanken-ele.co.jp/en/guide/GaN/SiC.html>

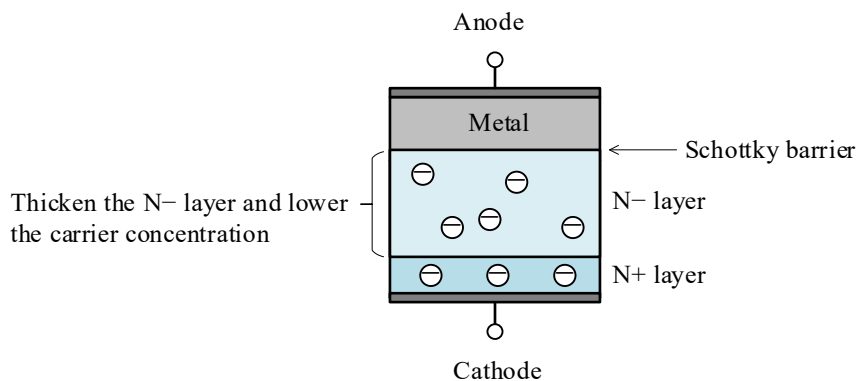


Figure 3-8. Schottky Junction

The height of the Schottky barrier depends on the type of metal connected to the semiconductor. The electrical characteristics are different depending on the type of metal. As shown in Figure 3-9, there is a trade-off relationship between the forward voltage drop, V_F , and the reverse leakage current, I_R , depending on the type of metal. Select the metal according to the target characteristics.

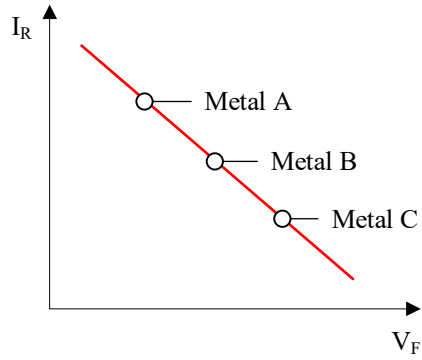


Figure 3-9. Characteristics Depending on the Metals

4. Diode Ratings and Characteristics







Absolute maximum ratings and electrical characteristics are described in the data sheet. This section describes the ratings and characteristics described in our data sheet.

4.1. Absolute Maximum Ratings

The absolute maximum ratings are defined as the allowable limits that should not be exceeded, even instantaneously. If one or more of these values are exceeded, the semiconductor device will break. Therefore, it is required to design electronic devices that use semiconductors so that stress exceeding the values is not applied to semiconductors even instantaneously.

Absolute maximum ratings do not guarantee reliability. Even within the absolute maximum ratings, if the recommended conditions are exceeded, their durability decreases and as a result, semiconductors may not withstand long-term use.

The parameters specified in the absolute maximum ratings are listed below. The parameters of absolute maximum ratings listed depend on the diode type.

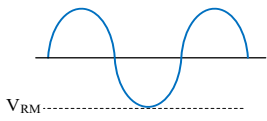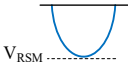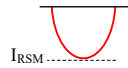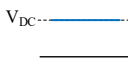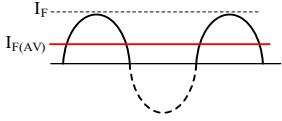Parameter	Symbol	Unit	Description	Waveform Image
Repetitive Peak Reverse Voltage	V_{RM}	V	Maximum reverse voltage (AC) that can be applied repeatedly	
Nonrepetitive Peak Reverse Voltage	V_{RSM}	V	The maximum reverse voltage that can be applied without repetition	
Peak Pulse Reverse Current	I_{RSM}	A	The maximum leakage current that can flow in the reverse direction without repetition	
Power Dissipation	P_D	W	The maximum power dissipation that the product can maintain its function	
DC Blocking Voltage	V_{DC}	V	The maximum reverse voltage (DC) that can be applied repeatedly	
Peak Pulse Reverse Power	P_{RSM}	W	The maximum power dissipation that can be permitted in the reverse direction without repetition	
Average Forward Current	$I_{F(AV)}$	A	Average forward current, I_F	
Surge Forward Current	I_{FSM}	A	The maximum current that can flow in the forward direction without repetition	
I^2t Limiting Value	I^2t	A^2s	I_{FSM} limit value that can flow with a pulse width of $1\text{ ms} \leq t_p < 100\text{ ms}$	
Junction Temperature	T_J	$^{\circ}C$	Temperature of semiconductor junction in the product	
Storage Temperature	T_{STG}	$^{\circ}C$	Temperature at which the product can be stored when the device is not operating	

4.2. Electrical Characteristics

Electrical characteristics show the performance of a product by specifying conditions such as temperature, voltage, and current. The parameters of electrical characteristics to be listed depend on the type of diode.

Parameter	Symbol	Unit	Description
Forward Voltage Drop	V_F	V	Voltage drop that occurs when a current flows in the forward direction
Forward Current	I_F	A	Current that flows when a voltage is applied in the forward direction
Reverse Voltage	V_R	V	Voltage drop that occurs when a current flows in the reverse direction
Reverse Leakage Current	I_R	μA	Leakage current that flows when a voltage is applied in the reverse direction
Reverse Leakage Current under High Temperature	$H \cdot I_R$	mA	Leakage current that flows when a voltage is applied in the reverse direction at high temperature
Breakdown Voltage	V_Z	V	Voltage when a voltage is applied in the reverse direction and current flows rapidly
Reverse Current	I_Z	A	Current that flows when reverse breakdown voltage, V_Z , is applied
Thermal Resistance	$R_{th(J-C)}$	$^{\circ}\text{C}/\text{W}$	Thermal resistance between semiconductor junction and case
	$R_{th(J-L)}$	$^{\circ}\text{C}/\text{W}$	Thermal resistance between semiconductor junction and lead
Breakdown Voltage Temperature Coefficient	r_Z	$\text{mV}/^{\circ}\text{C}$	The coefficient that shows the relationship between V_Z and temperature
Breakdown Region Equivalent Resistance	R_Z	Ω	A value that shows the relationship between V_Z and current
Reverse Recovery Time	t_{rr}	μs	The time from when the recovery current flows until the recovery current decreases
Pulse Width	t_p	ms	Time of current flowing through the product and the applied voltage
Case Temperature	T_C	$^{\circ}\text{C}$	Product case temperature
Lead Temperature	T_L	$^{\circ}\text{C}$	Product lead temperature
Ambient Temperature	T_A	$^{\circ}\text{C}$	Ambient temperature of the product

4.3. Mechanical Characteristics

These are the mechanical characteristics of a product. The parameters of mechanical characteristics to be listed depend on the type of diode.

Parameter	Unit	Description
Heatsink Mounting Screw Torque	N·m	Maximum tolerance of heatsink mounting screw torque
Package Weight	g	Product weight

Important Notes

- All data, illustrations, graphs, tables and any other information included in this document (the “Information”) as to Sanken’s products listed herein (the “Sanken Products”) are current as of the date this document is issued. The Information is subject to any change without notice due to improvement of the Sanken Products, etc. Please make sure to confirm with a Sanken sales representative that the contents set forth in this document reflect the latest revisions before use.
- The Sanken Products are intended for use as components of general purpose electronic equipment or apparatus (such as home appliances, office equipment, telecommunication equipment, measuring equipment, etc.). Prior to use of the Sanken Products, please put your signature, or affix your name and seal, on the specification documents of the Sanken Products and return them to Sanken. When considering use of the Sanken Products for any applications that require higher reliability (such as transportation equipment and its control systems, traffic signal control systems or equipment, disaster/crime alarm systems, various safety devices, etc.), you must contact a Sanken sales representative to discuss the suitability of such use and put your signature, or affix your name and seal, on the specification documents of the Sanken Products and return them to Sanken, prior to the use of the Sanken Products. The Sanken Products are not intended for use in any applications that require extremely high reliability such as: aerospace equipment; nuclear power control systems; and medical equipment or systems, whose failure or malfunction may result in death or serious injury to people, i.e., medical devices in Class III or a higher class as defined by relevant laws of Japan (collectively, the “Specific Applications”). Sanken assumes no liability or responsibility whatsoever for any and all damages and losses that may be suffered by you, users or any third party, resulting from the use of the Sanken Products in the Specific Applications or in manner not in compliance with the instructions set forth herein.
- In the event of using the Sanken Products by either (i) combining other products or materials or both therewith or (ii) physically, chemically or otherwise processing or treating or both the same, you must duly consider all possible risks that may result from all such uses in advance and proceed therewith at your own responsibility.
- Although Sanken is making efforts to enhance the quality and reliability of its products, it is impossible to completely avoid the occurrence of any failure or defect or both in semiconductor products at a certain rate. You must take, at your own responsibility, preventative measures including using a sufficient safety design and confirming safety of any equipment or systems in/for which the Sanken Products are used, upon due consideration of a failure occurrence rate and derating, etc., in order not to cause any human injury or death, fire accident or social harm which may result from any failure or malfunction of the Sanken Products. Please refer to the relevant specification documents and Sanken’s official website in relation to derating.
- No anti-radioactive ray design has been adopted for the Sanken Products.
- The circuit constant, operation examples, circuit examples, pattern layout examples, design examples, recommended examples, all information and evaluation results based thereon, etc., described in this document are presented for the sole purpose of reference of use of the Sanken Products.
- Sanken assumes no responsibility whatsoever for any and all damages and losses that may be suffered by you, users or any third party, or any possible infringement of any and all property rights including intellectual property rights and any other rights of you, users or any third party, resulting from the Information.
- No information in this document can be transcribed or copied or both without Sanken’s prior written consent.
- Regarding the Information, no license, express, implied or otherwise, is granted hereby under any intellectual property rights and any other rights of Sanken.
- Unless otherwise agreed in writing between Sanken and you, Sanken makes no warranty of any kind, whether express or implied, including, without limitation, any warranty (i) as to the quality or performance of the Sanken Products (such as implied warranty of merchantability, and implied warranty of fitness for a particular purpose or special environment), (ii) that any Sanken Product is delivered free of claims of third parties by way of infringement or the like, (iii) that may arise from course of performance, course of dealing or usage of trade, and (iv) as to the Information (including its accuracy, usefulness, and reliability).
- In the event of using the Sanken Products, you must use the same after carefully examining all applicable environmental laws and regulations that regulate the inclusion or use or both of any particular controlled substances, including, but not limited to, the EU RoHS Directive, so as to be in strict compliance with such applicable laws and regulations.
- You must not use the Sanken Products or the Information for the purpose of any military applications or use, including but not limited to the development of weapons of mass destruction. In the event of exporting the Sanken Products or the Information, or providing them for non-residents, you must comply with all applicable export control laws and regulations in each country including the U.S. Export Administration Regulations (EAR) and the Foreign Exchange and Foreign Trade Act of Japan, and follow the procedures required by such applicable laws and regulations.
- Sanken assumes no responsibility for any troubles, which may occur during the transportation of the Sanken Products including the falling thereof, out of Sanken’s distribution network.
- Although Sanken has prepared this document with its due care to pursue the accuracy thereof, Sanken does not warrant that it is error free and Sanken assumes no liability whatsoever for any and all damages and losses which may be suffered by you resulting from any possible errors or omissions in connection with the Information.
- Please refer to our official website in relation to general instructions and directions for using the Sanken Products, and refer to the relevant specification documents in relation to particular precautions when using the Sanken Products.
- All rights and title in and to any specific trademark or tradename belong to Sanken and such original right holder(s).

DSGN-CEZ-16003